

# INSTRUCTIONS FOR USE

## CarboProbe CP

**ECONOX**  
Rue de l'église 25  
2942 Alle – Switzerland  
T: ++41 32 465 10 00  
F: ++41 32 465 10 01  
[www.econox.ch](http://www.econox.ch)  
[info@econox.ch](mailto:info@econox.ch)

The details in this document are provided for information purposes only. This manual may not, in any event, be reproduced, dissociated or distributed to third parties without the consent of ECONOX SA.

# TABLE OF CONTENT

1. Operationnal principles .....	3
Introduction .....	4
Applications.....	4
How does the air supply affect the firing? .....	5
The benefits of an oxygen probe .....	5
How to install the oxygen probe .....	5
Understanding an oxygen probe .....	6
2. Checking temperature using the CarboProbe CP plus	<b>Erreur ! Le</b>
<b>signet n'est pas défini.</b>	
3. Repairing the sensor .....	7

## 1. Operationnal principles

ECONOX uses two different types of electrolyte made of  $ZrO_2$  (zirconium oxide) for its oxygen sensors:

1. A ball made of  $ZrO_2$ , an ECONOX-patented system, which may only be obtained from ECONOX. The ball is used in the *CarboProbe ZI pro* sensor.

2. A C-700  $ZrO_2$  electrolyte.

This is used in the *CarboProbe ZS, HT, CP* and LTsensors.


An oxygen probe works by comparing the oxygen level in the kiln with the oxygen level inside the alumina tube. This is why the air inside the tube must always be renewed. If the temperature of the the zirconia tip is over about 700 °C, it produces an electrical voltage. The less oxygen in the kiln, the bigger the electrical voltage, so the voltage can be used as a guide to the oxygen level.

**There is no safety hazard - the maximum a probe can produce is less than a battery!**

## ***Introduction***

The CP probe is a very simple, low cost oxygen probe with an easy-to-read digital meter displaying oxidation/reduction. The CP Probe saves you money by omitting the thermocouple pyrometer, so that you can continue to use cones. This probe is ideal to control both gas and wood-fired kilns.

ECONOX supplies 2 different kinds of CP probes

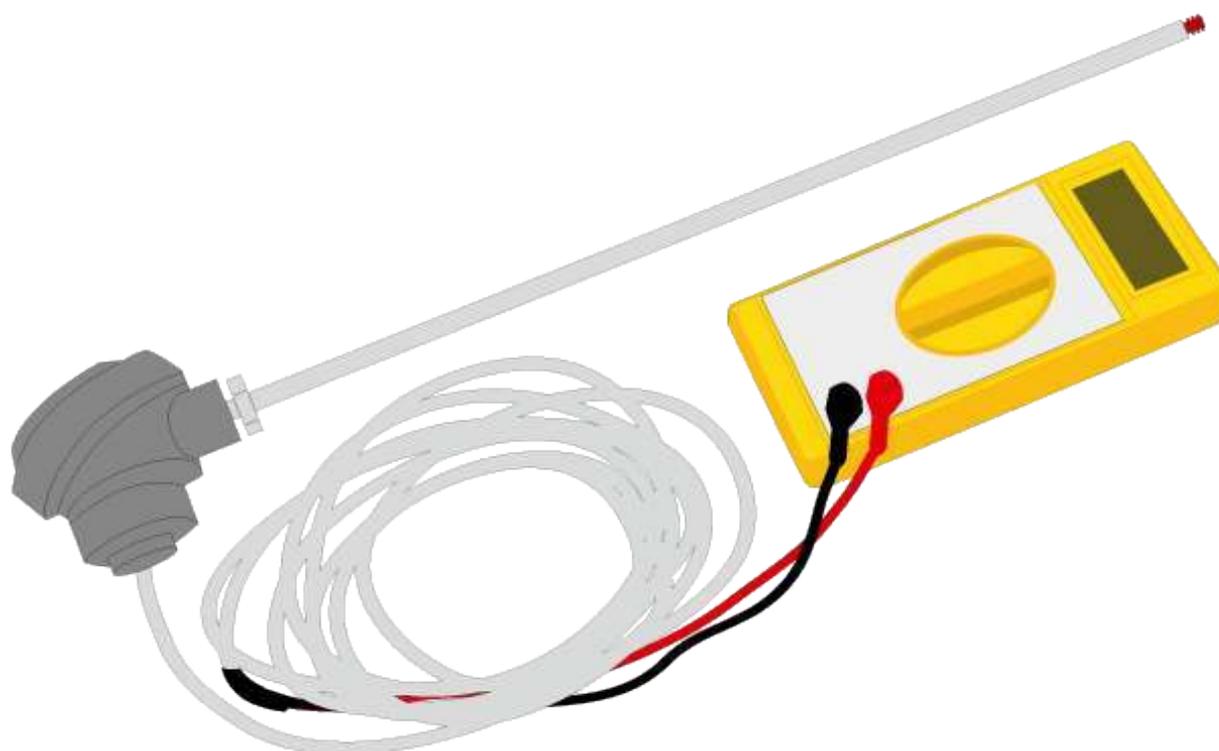

An oxygen probe works by comparing the oxygen level in the kiln with the oxygen level inside the alumina tube. This is why the air inside the tube must always be renewed. If the temperature of the the zirconia tip is over about 700 °C, it produces an electrical voltage. The less oxygen in the kiln, the bigger the electrical voltage, so the voltage can be used as a guide to the oxygen level.

## ***Applications***

The advantages of measurement of oxidation/reduction include:

- **Fuel savings** - an economical firing depends on supplying the right ratio air/fuel, without waste of energy from heating excess air.
- **Reliable glaze colours** - Knowing the right level of reduction every firing gives you the colours you want, firing after firing.
- **Reduced air pollution** - Use the CP Probe as a guide for stoking wood-fired kilns to reduce wood consumption and unnecessary ash and smoke.

## ***How does the air supply affect the firing?***

### **The right amount of air**

will give the hottest flame and the fastest temperature rise. This is the most economical heating.

### **Too much air**

makes the flame cooler. The flow of excess air can help distribute the heat more uniformly.

### **Not enough air**

can still give a hot flame and can give interesting special effects in glaze colours.

## ***The benefits of an oxygen probe***

### **Efficient fuel use**

To reach the highest temperature with the least fuel, use a neutral flame. The oxygen probe will tell you if you have a good balance of fuel and air, because the reading will be in the range of 100mV to 200mV.

### **Glaze control**

Some glaze colours are affected by how heavily reducing the flame is. Sometimes there is a difference in colour between a slightly reducing flame with an oxygen reading of 0.35 and a heavy reduction of 0.6. In a reducing flame, the oxygen reading is usually much more stable and it is easy to measure the degree of reduction quite accurately. The potter can record the reduction conditions, then obtain the same glaze colours on later burns.

## ***How to install the oxygen probe***

Fit the probe anywhere in the kiln or furnace where a pyrometer could be fitted. If the probe is used at temperatures over 1100 deg C / 2000 deg F, put it through the top, so the ceramic tube hangs vertically. If the probe is used horizontally at high temperatures, it will gradually sag.

Seal the hole for the probe well enough to prevent air from flowing inwards and affecting the oxygen reading.

When fitting or removing a probe into or out of a hot furnace, move the probe slowly to prevent thermal shock.

Once the kiln is over 700 °C and the reference air is available, the probe is ready to use.

## Understanding an oxygen probe

Roughly speaking, a reading less than 0.1 represents oxidising conditions and a reading over 0.3 represents reduction. Heavy reduction might give a reading of 0.5 or even more. In between 0.1 and 0.3 the temperature must be known for accurate interpretation.

In any flame, the air and fuel never mix perfectly. As burning fuel blows past the tip of the oxygen probe, some of the flame will have excess air and some will be gas rich. This means that the oxygen reading will jump around as the flame flickers past. This is most noticeable when there is just the right amount of air to give a neutral flame.

### Chart of oxygen concentration from probe reading

mV	700°C	800°C	900°C	1000°C	1100°C	1200°C	1300°C
50	1.9 %	2.4 %	2.9 %	3.4 %	3.9 %	4.3 %	4.8 %
100	0.2 %	0.3 %	0.4 %	0.5 %	0.7 %	0.9 %	1.1 %
150	0.02 %	0.03 %	0.06 %	0.09 %	0.13 %	0.18 %	0.25 %
200	0.002 %	0.004 %	0.01 %	0.01 %	0.02 %	0.04 %	0.06 %
250	0.001 %	0.0004 %	0.001 %	0.002 %	0.004 %	0.01 %	0.01 %
300	0.00001%	0.00005%	0.0001%	0.0004%	0.001 %	0.002 %	0.003 %

Red= OXIDISING

Green= NEUTRAL

Blue= REDUCING

Air consists of 20.9% oxygen, about 78% nitrogen and some trace gases. In a flame, the fuel combines with the oxygen in the air and burns, forming carbon dioxide and water vapour (steam). Inside a kiln, there is a mixture of fuel, oxygen, carbon dioxide, steam and nitrogen. The amount of each of these depends on the amount of fuel and air in the flame.

#### Oxidising flame

With excess air, there is typically over 2% oxygen in the exhaust gas, but it can be almost up to the limit of 20.9%. This is called an "oxidising" flame.

#### Neutral flame

With exactly the right amount of air for the fuel, there is a "neutral" flame. Even in ideal conditions, there will be some fuel and some air that cannot find each other to burn completely. A little unused fuel and air will be in the exhaust gas leaving the kiln. There is typically anything from 0.02% to 2% unused oxygen in the exhaust.

#### Reducing flame

With too little air, there will be unburnt fuel in the exhaust gas. This is called a "reducing" flame. Many people say that there is no oxygen under these conditions, but there will always be some unused oxygen in the exhaust. It might be less than 0.02%. It might be less than 0.000001%, but it is there and it can be measured.

There is no sharp distinction between oxidising, neutral and reducing. There is a smooth variation from one to the next, so the above figures are only guidelines.

### 3. Repairing the sensor

*CarboProbe* sensors are highly technical measuring instruments subjected to potentially difficult work conditions. The lifespan of a given sensor depends, to a large extent, on the conditions in which it is used.

When sending a sensor for repair, pack it carefully in its original packaging, mark it "Fragile Instrument", and return it to:

**ECONOX SA**  
Rue de l'église 25  
2942 Alle – Switzerland  
T: ++41 32 465 10 00  
F: ++41 32 465 10 01  
[www.econox.ch](http://www.econox.ch)  
[info@econox.ch](mailto:info@econox.ch)